# **QUEST 335** INTAKE DUCT INSTALLATION GUIDE

### AIR CAN BE DISTRIBUTED FROM THE UNIT IN TWO WAYS:

#### **1** USE RECTANGULAR DUCT.

- REMOVE THE FILTER FROM THE UNIT AND SET ASIDE.
   THIS WILL BE RE-USED AFTER THE DUCTING IS IN-STALLED.
- B. ATTACH INTAKE DUCT PLENUM (ITEM 4) TO QUEST
   335 AIR INTAKE USING FOUR (4) #10-24 SHEET METAL
   SCREWS. REFERENCE "SAFE ZONE" DIAGRAM IN QUEST
   335 MANUAL (SECTION 4.6) IF UNSURE OF FASTENER
   LOCATIONS.
  - LOOSEN THE TWO SCREWS ON THE RIGHT SIDE OF THE UNIT (DO NOT REMOVE) TO FIT THROUGH THE KEYHOLE SLOT THEN TIGHTEN DOWN
- C. OPEN AND REMOVE FILTER DOOR (ITEM 3)
- D. SLIDE FILTER INTO INTAKE DUCT PLENUM (ITEM 4).
- E. INSTALL FILTER DOOR (ITEM 3) OVER FILTER OPENING IN INTAKE DUCT PLENUM (ITEM 4).
- F. ATTACH RECTANGULAR DUCTING (NOT INCLUDED) DIRECTLY TO INTAKE DUCT PLENUM (ITEM 4).


#### **2** USE 1-16" ROUND DUCT.

- A. REMOVE THE FILTER FROM THE UNIT AND SET ASIDE. THIS WILL BE RE-USED AFTER THE DUCTING IS INSTALLED.
- B. ATTACH INTAKE DUCT PLENUM (ITEM 4) TO QUEST 335 AIR INTAKE USING FOUR (4) #10-24 SHEET METAL SCREWS. REFERENCE SAFE ZONE IMAGE IF UNSURE OF FASTENER LOCATIONS.

- LOOSEN THE TWO SCREWS ON THE RIGHT SIDE OF THE UNIT (DO NOT REMOVE) TO FIT THROUGH THE KEY-HOLE SLOT THEN TIGHTEN DOWN

- C. OPEN AND REMOVE FILTER DOOR (ITEM 3)
- D. SLIDE FILTER INTO INTAKE DUCT PLENUM (ITEM 4).
- E. INSTALL FILTER DOOR (ITEM 3) OVER FILTER OPENING IN INTAKE DUCT PLENUM (ITEM 4).
- F. ATTACH 16" DIAMETER ROUND DUCT COLLAR (NOT PRO-VIDED) TO DUCT ADAPTER FACE **(ITEM 5)**.

### **CAUTION** WHEN DUCTING THE UNIT, A DEDICATED DUCT SYSTEM IS RECOMMENDED FOR EACH UNIT. RECOMMENDED 25' MAX RUN OF DUCTING.

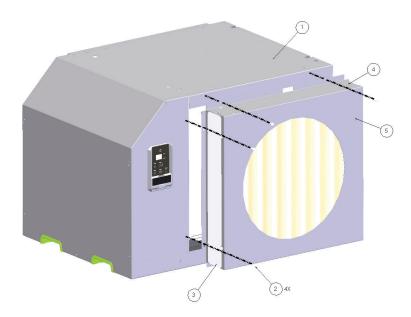

- **ITEM 1:** Quest 335 Dehumidifier (not provided)
- ITEM 2: #10-24 Hex-Slotted Screws (4)
- ITEM 4: Intake Duct Adapter (1)
- ITEM 5: Duct Adapter Face (1)
  - ITEM 7: 16" Dia. Duct Collar (not provided)\*
  - ITEM 8: 1/8" Drill Bit

\* Available at any hardware or HVAC store



For more details, scan above for the 335 manual.

QUESTCLIMATE.COM 1.877.420.1330

# **QUEST 335** EXHAUST DUCT INSTALLATION GUIDE

## AIR CAN BE DISTRIBUTED FROM THE UNIT IN TWO WAYS:

## **1** USE RECTANGULAR DUCT.


- A. ATTACH EXHAUST DUCT PLENUM (ITEM 6) TO THE QUEST 335 AIR OUTLET USING SIX (6) #10-24 SHEET METAL SCREWS. REFERENCE THE "SAFE ZONE" DIAGRAM IN QUEST 335 MANUAL (SECTION 4.6) FOR FASTENER LOCATION.
- B. ATTACH RECTANGULAR DUCTING (NOT PROVIDED) DIRECTLY TO EXHAUST DUCT PLENUM (ITEM 6).

#### 2 USE 1-16" ROUND DUCT.

- A. ATTACH **ITEM 6** (EXHAUST DUCT PLENUM) TO **ITEM 1** (UNIT) USING SIX (6) #10-24 SHEET METAL SCREWS.
- B. ATTACH 16" DIAMETER ROUND DUCT TO EXHAUST DUCT PLENUM FACE **(ITEM 5)**.

## 

## WHEN DUCTING THE UNIT, A DEDICATED DUCT SYSTEM IS RECOMMENDED FOR EACH UNIT. RECOMMENDED 25' MAX RUN OF DUCTING.

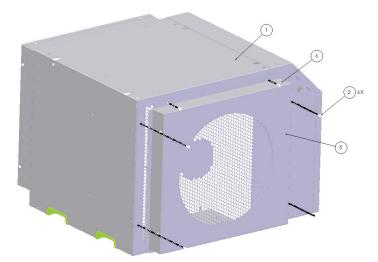

ITEM 1: Quest 335 Dehumidifier (not provided)
ITEM 2: #10-24 Hex-Slotted Screws (6)
ITEM 5: Duct Plenum Face (1)
ITEM 6: Exhaust Duct Plenum (1)
ITEM 7: 16" Dia. Duct Collar (not provided)\*
ITEM 8: 1/8" Drill Bit

\* Available at any hardware or HVAC store



FOR MORE DETAILS, SCAN ABOVE FOR THE 335 MANUAL