




A70, A95 and A130 Series Dehumidifier Hanging Kit

Model 5660 and 5691 | Specification Sheet
and Installation Instructions

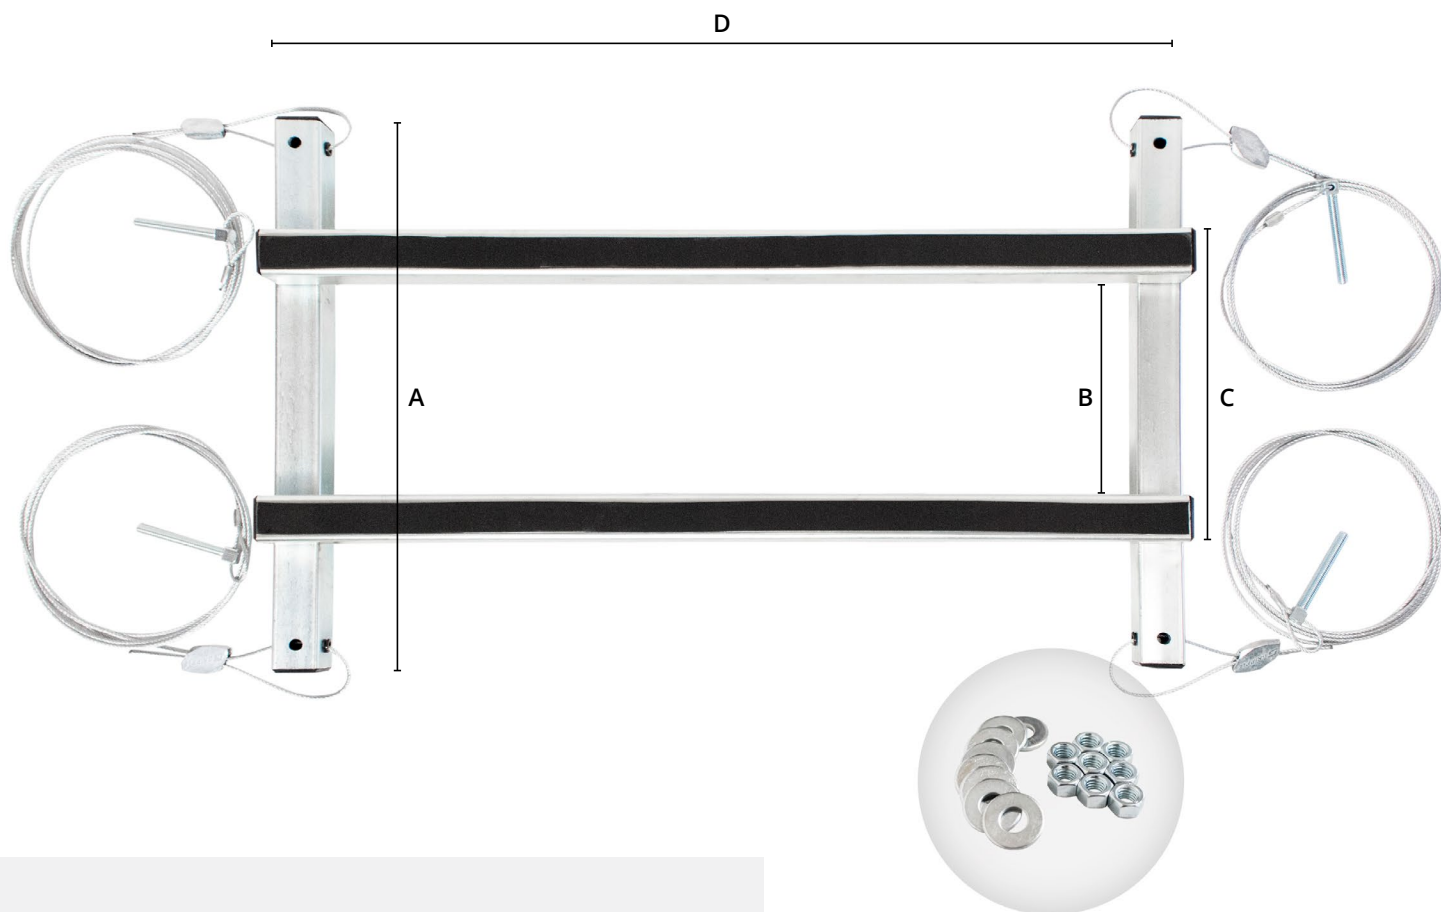

		MODEL 5660	MODEL 5691
		Compatible with Dehumidifier Models A70 and A95	Compatible with Dehumidifier Model A130
A	Width	18"	27"
B	Inside Rail Width	5 ³ / ₄ "	10 ¹ / ₂ "
C	Outside Rail Width	8 ³ / ₄ "	13 ¹ / ₂ "
D	Length	29 ⁷ / ₈ "	38"

SPECIFICATIONS		
Model	5560 Hanging Kit	5691 Hanging Kit
Dimensions: (Hanging Kit Only)		
Width	18"	27"
Height	3"	3"
Length	29 ⁷ / ₈ "	38"
Weight	13 lbs.	18 lbs.
Weight: (Working Load)	400 lbs.	400 lbs.
Shipping Weight: (w/Carton)	14.6 lbs.	19.7 lbs.

► MODEL 5660/5691 DEHUMIDIFIER HANGING KIT

- + 14 gauge zinc-plated steel
- + 1/4" thick black neoprene pads for vibration insulation
- + 10' cables with Gripple® clamps and 3 1/2" bolts
- + Total safe working load 400 lbs.
- + Parts bag includes (8) 3/8" flat washers, (8) 3/8" hex nuts, and Gripple key

Installing an Anden Dehumidifier with Model 5660 and 5691 Hanging Kits

- 1** Open box and remove the contents.
Contents include:

- + Hanging bracket with cables and bolts
- + 8 nuts, 8 washers
- + Gripple key
- + Installation instructions



- 2** Unfold the hanging bracket so the support bars are perpendicular to the hanging bars.



- 3** Use two washers and two nuts on each cable bolt when mounting the hanging bracket to a structure. Make sure the structure can support the weight of the hanging bracket and dehumidifier.




- 4** Extend the dehumidifier feet approximately $\frac{3}{4}$ " to 1".



- 5** With the feet extended, center the dehumidifier on the hanging bracket, with the feet outside of the support bars.



- 6** Adjust the height of the hanging bracket by either pulling on the cable or inserting the Gripple key to release tension.

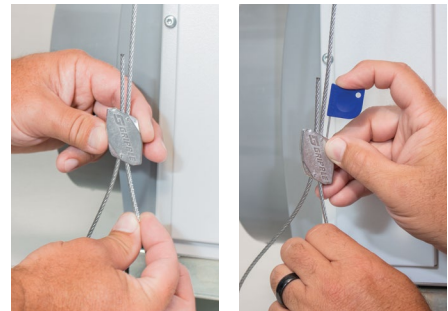

CAUTION:
BRACKET AND DEHUMIDIFIER
MUST BE SUPPORTED WHEN KEY
IS USED TO RELEASE THE CABLE.

- 7** Set a level on top of the dehumidifier to make sure it is level in both directions.

