

Quest 335 Coil Probe Location

SERVICE DOCUMENT



Quest 335-208/230v: #4042500

Quest 335-277v: #4042600


OVERVIEW:

Evaporator probe location is critical for proper unit function. A slight location change can affect the evaporate temperature by 5-10°F. This document will locate the probe in the correct location.

CAUSE:

There are 3 circuits in the evaporator coil. The probe location should be between the rear two circuits in **GREEN**. The incorrect location is in **RED**. From left to right the probe should be centered in the coil. If in the wrong location the probe can be pulled out and reinserted into the correct location. Take care to not bend the probe when inserting back into the coil.

TOP VIEW

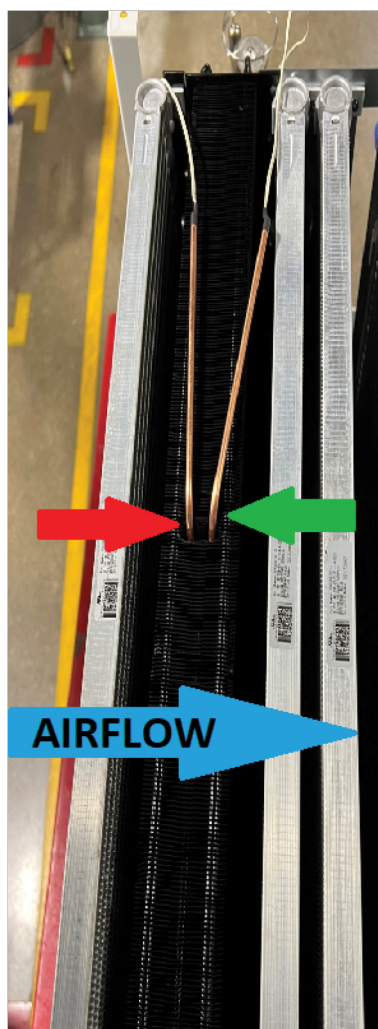

SIDE VIEW

