


OVERVIEW:


Previous but non-current alarms will be stored in the PLC for later diagnosis. The process to erase these stored alarms is intentionally difficult so that history is not accidentally erased. This document will detail the steps to erase the stored alarms.

PROCESS:


- Power unit on
- Press Target button
- Enter Password 9191 using up, down and enter keys. (This code allows access to many settings that can harm unit function. Do not change any settings other than the one outlined here.)

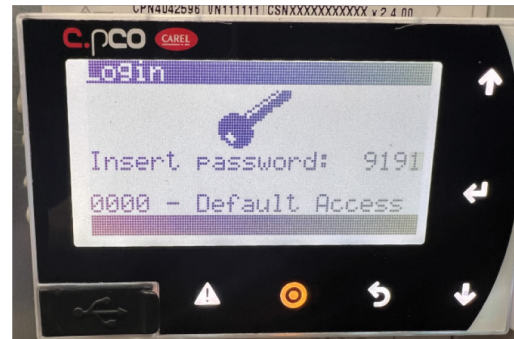


- Scroll down to setting and press enter

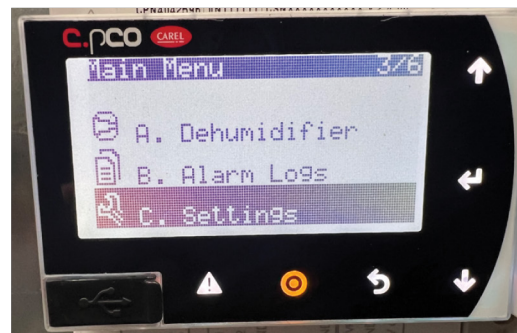

- Scroll down to initialization and press enter

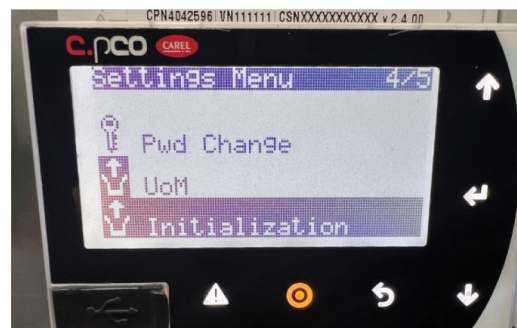

- On this screen, press enter to highlight the “NO” on Delete alarm logs line. Press up or down arrow key to change to “YES” the press enter. This will clear the stored Alarms but does not give you an indication it was done. Using the Alarm Triangle button see if codes are stored.

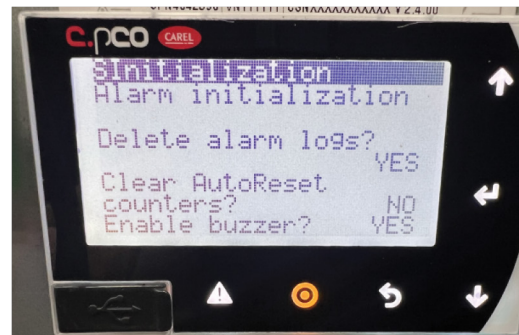

Have Questions? Contact the Quest service department at **877-420-1330** or **service@questclimate.com**